



# KIOSK

 
## INSTALLATION MANUAL

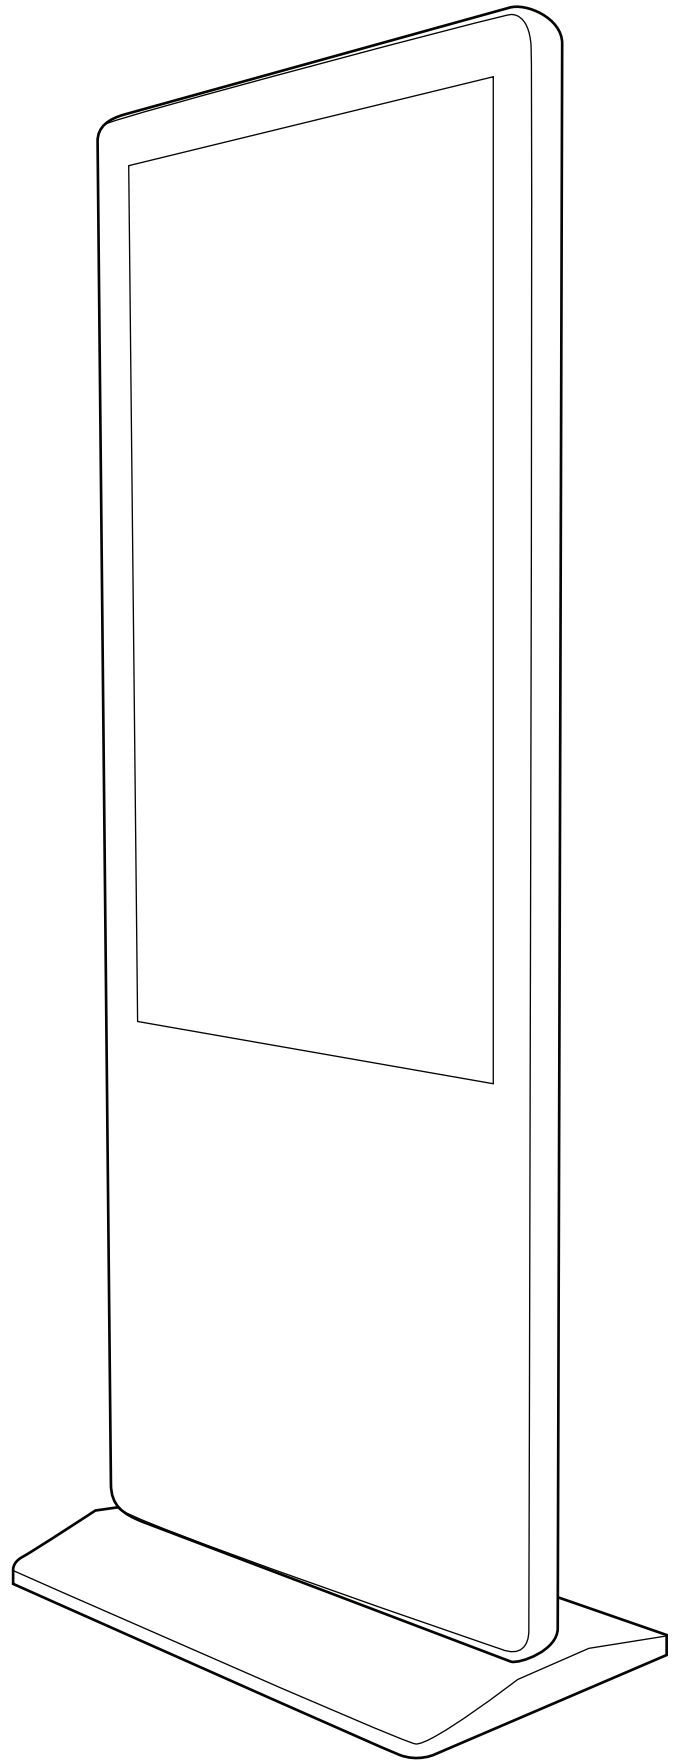


**kuusoft**

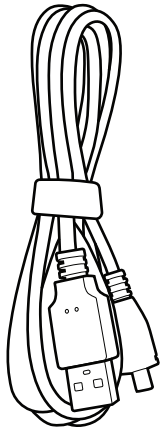


**1x**  
Micro USB  
Cable

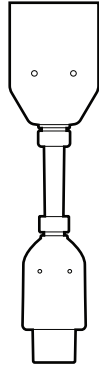


**1x**  
HDMI  
Extender

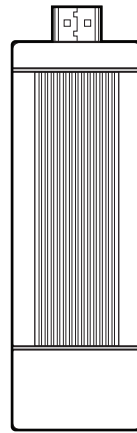


**1x**  
Nano-PC3

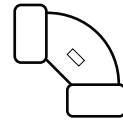


**1x**  
Cornering  
Anchor

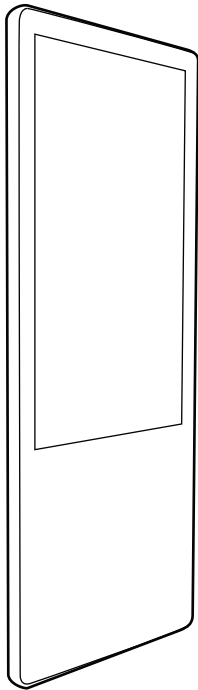


**1x**  
Kiosk Display

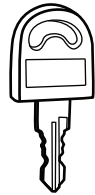 


**2x**  
Kiosk Key

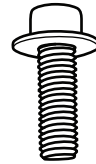 


**12x**  
Kiosk Stand  
Screws

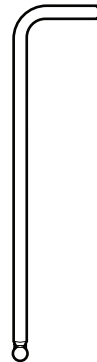 

**1x**  
Allen Key

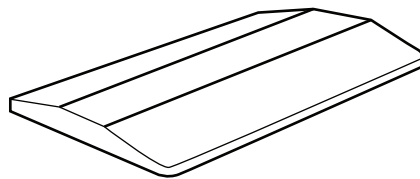

**1x**  
Kiosk Stand

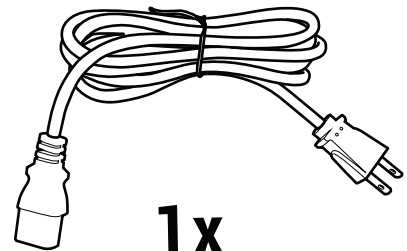

**1x**  
AC Power Cord


**1x**  
Remote (not shown)

# Installing the Kiosk Stand

1. Unbox the Kiosk Display and place it on a flat surface, screen facing up with a minimum of 12" off the ground




2. Attach the Kiosk Stand and tightly screw in the 12 Kiosk Stand Screws using the Allen Key

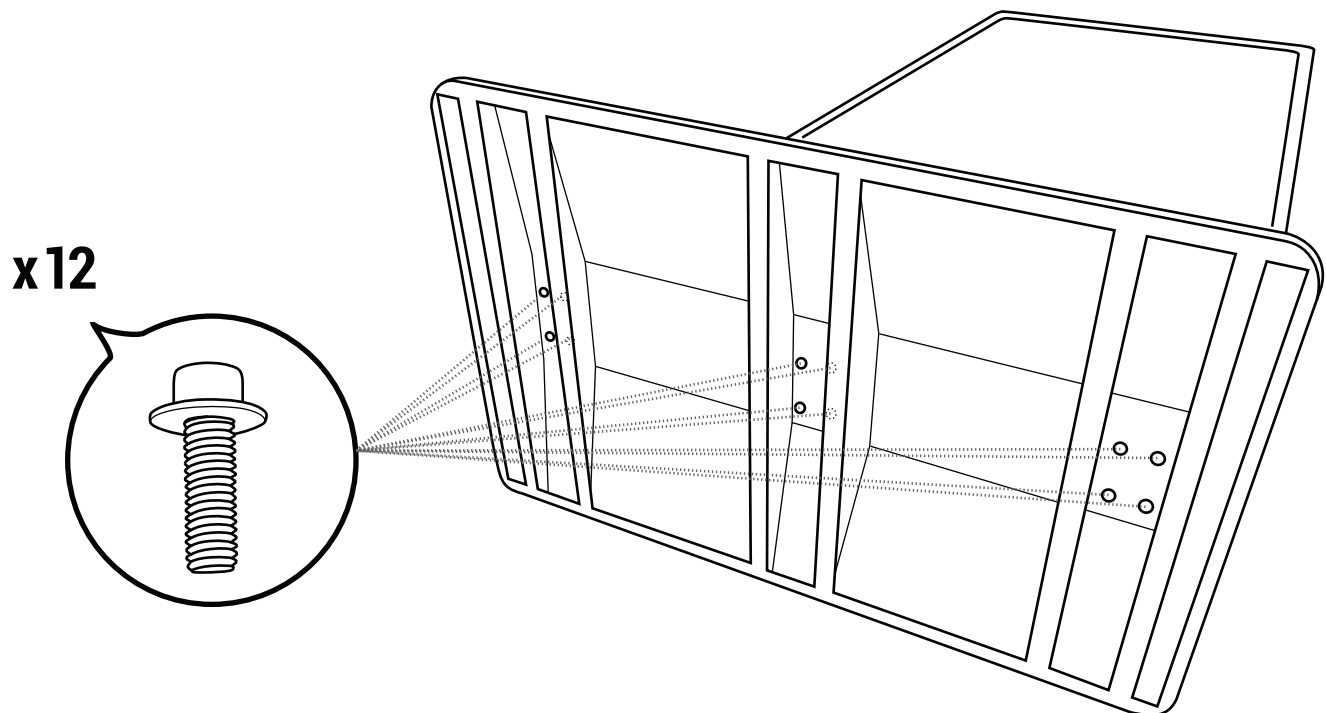


# Installing the Nano-PC3 into the Kiosk


1. Attach the HDMI Extender to Nano-PC3

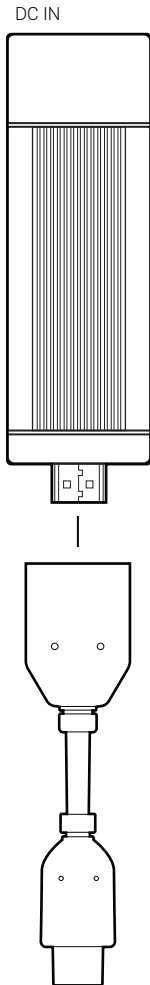

2. Bend the HDMI Extender 90 degrees and attach the Cornering Anchor

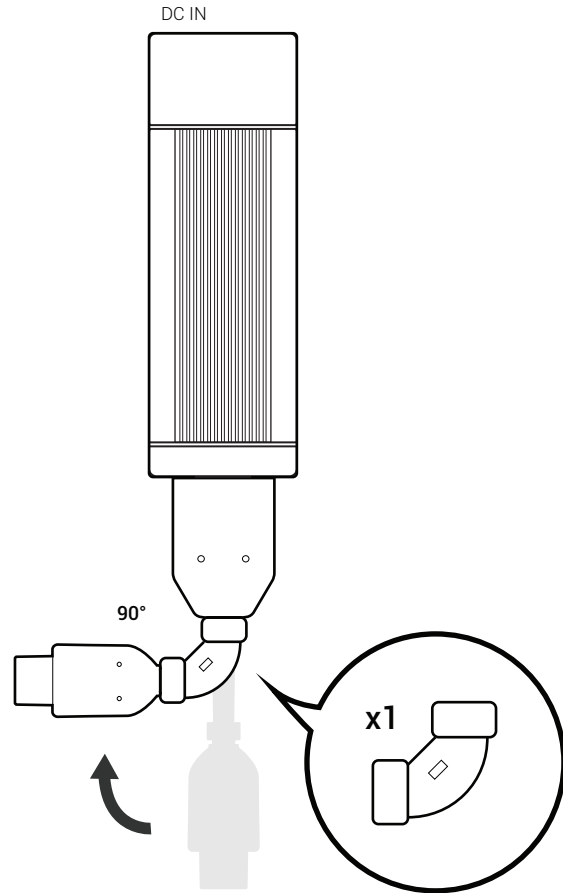


3. Open the back panel of the Kiosk Display with the included Kiosk Key

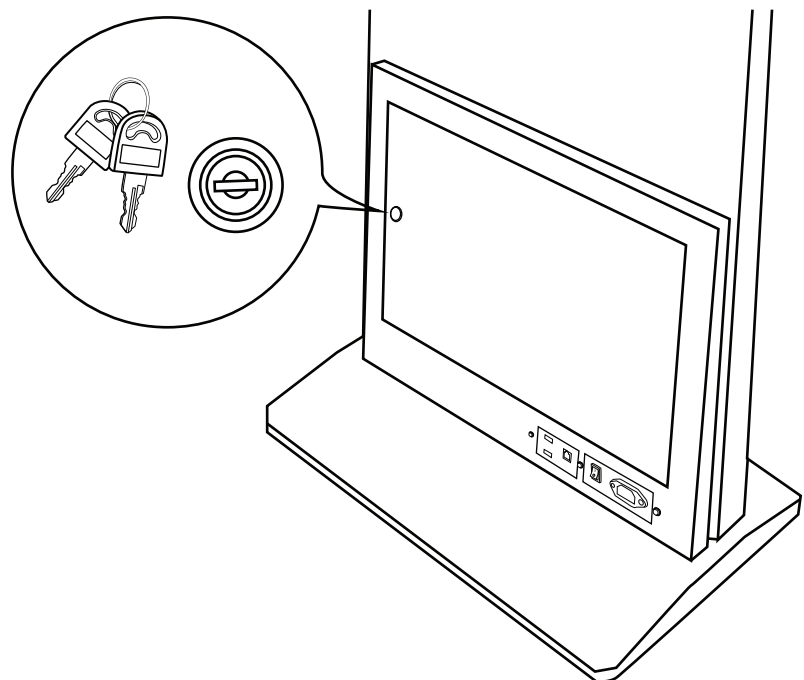


#### 4. Inside the Kiosk

- A** Plug the Micro USB Cable into the “DC IN” port on the Nano-PC3
- B** Plug the HDMI Extender into the HDMI port of the Kiosk
- C** Plug the other end of the Micro USB cable into the USB port of the Kiosk

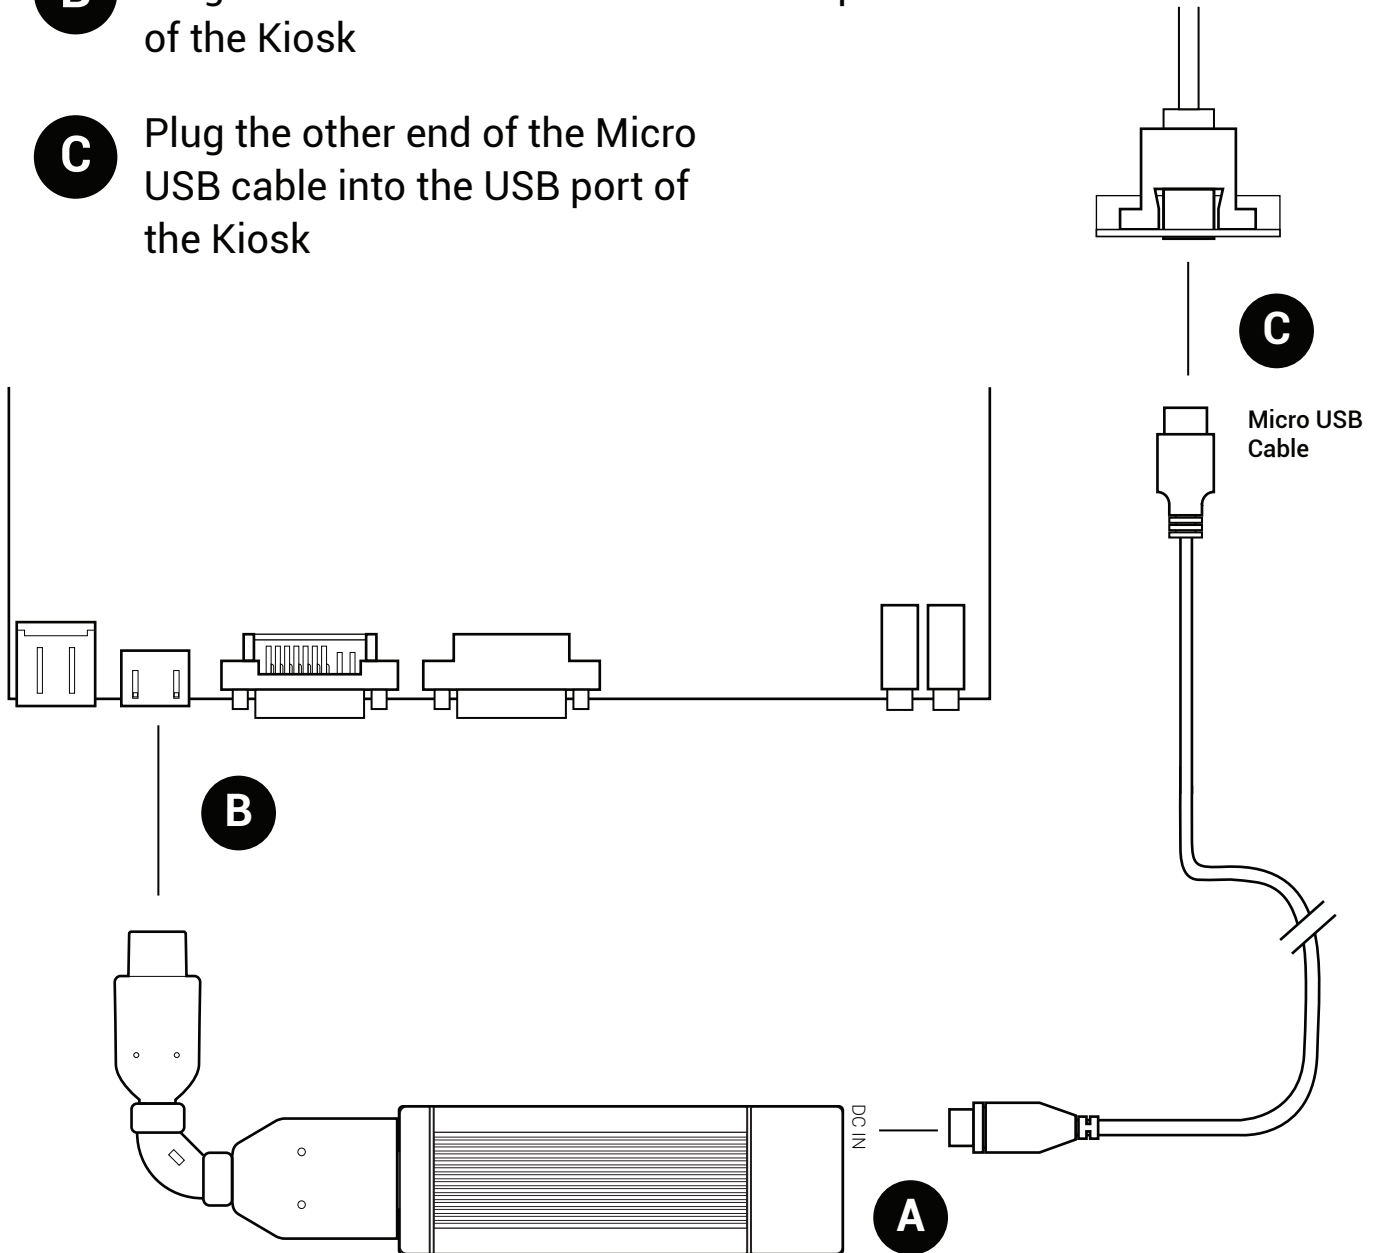

**5. Close the back panel of the Kiosk Display with the included Kiosk Key**

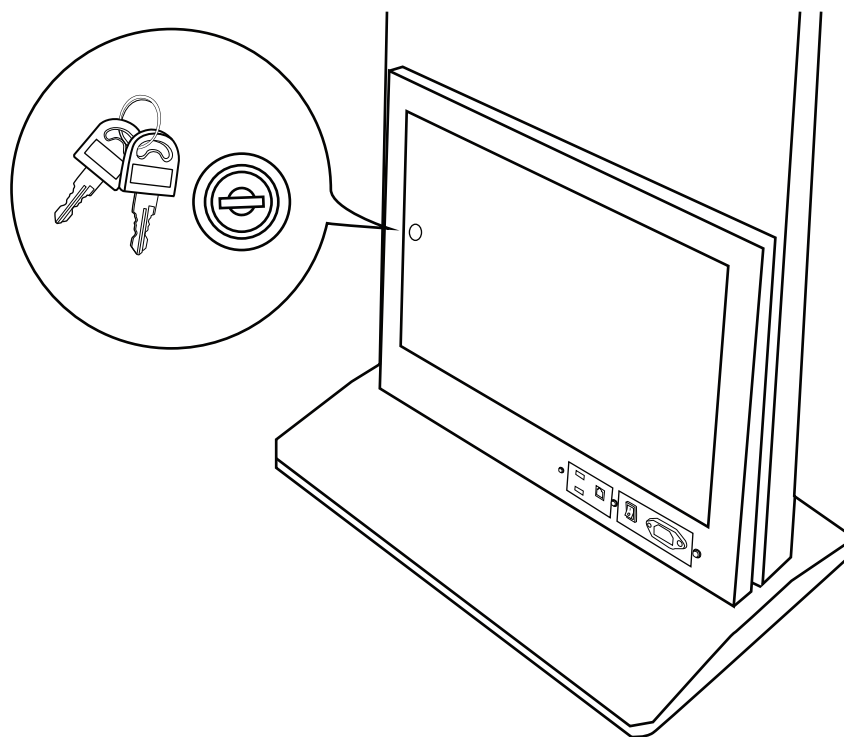

## **Power on the Kiosk**

1. Plug in the AC Power Cord into the back of the Kiosk and the other end into a Power Outlet
2. Flip the switch from "0" to "1"

