



TOUCHSCREEN KIOSK

 
INSTALLATION MANUAL

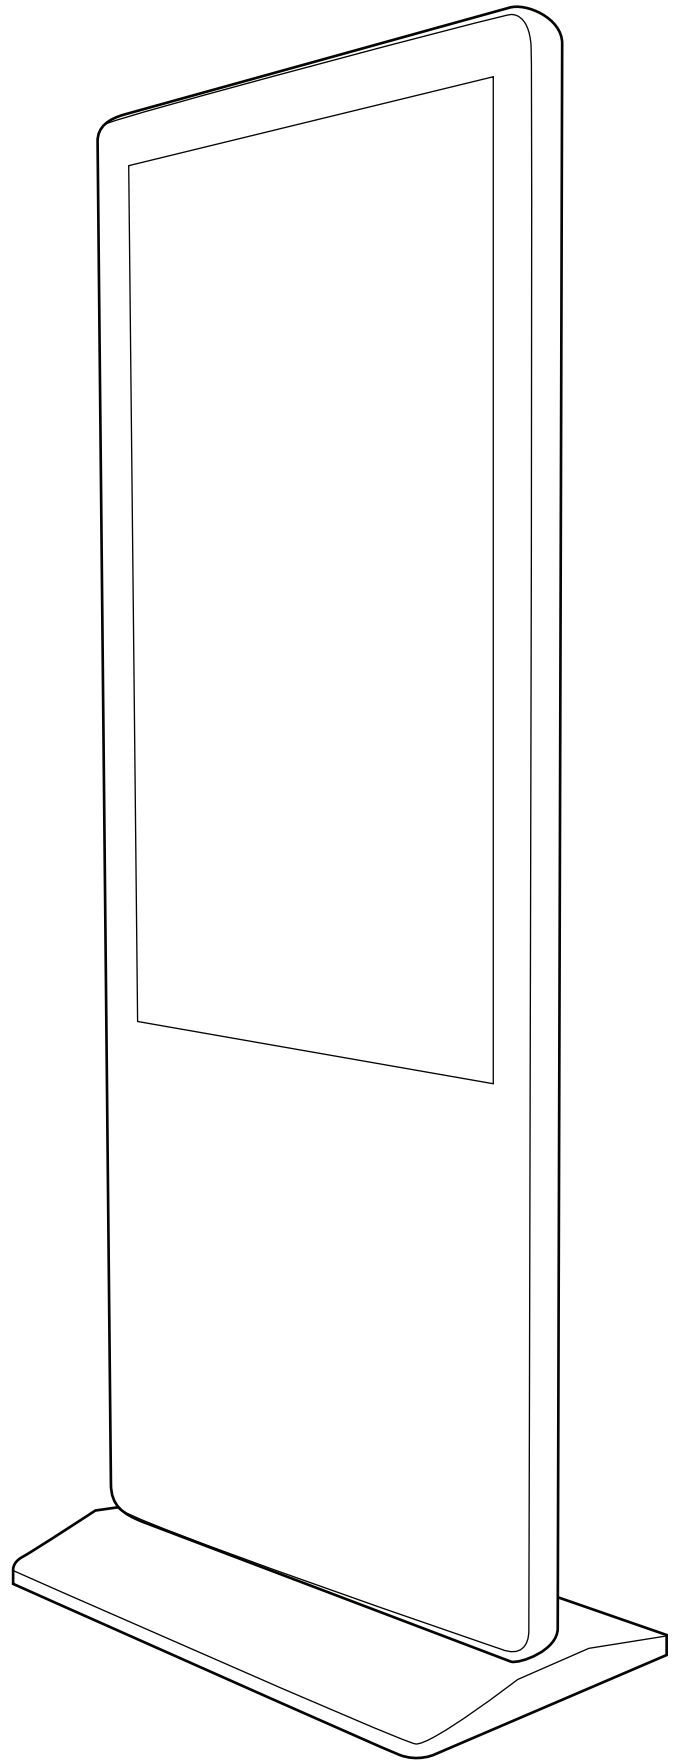

kuusoft

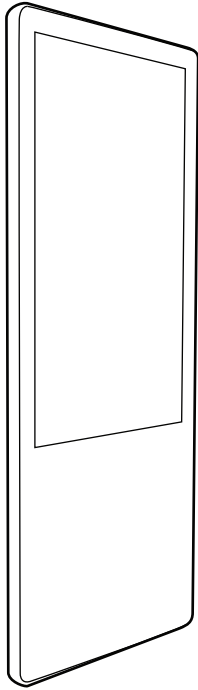


1x
Kiosk Display




2x
Kiosk Key



 
2x
Power Key



12x
Kiosk Stand Screws

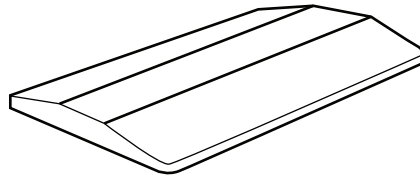

1x
Kiosk Stand

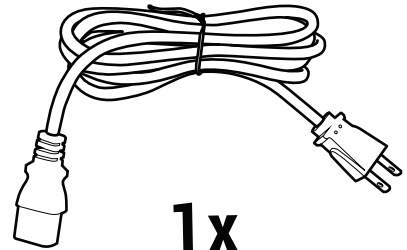

1x
AC Power Cord

1x
Remote (not shown)



1x
Wi-Fi Antenna
(not required)



1x
Allen Key


1x
Network Cable
(not included)

Installing the Kiosk Stand


1. Unbox the Kiosk Display and place it on a flat surface, screen facing up with a minimum of 12" off the ground




2. Attach the Kiosk Stand and tightly screw in the 12 Kiosk Stand Screws using the Allen Key

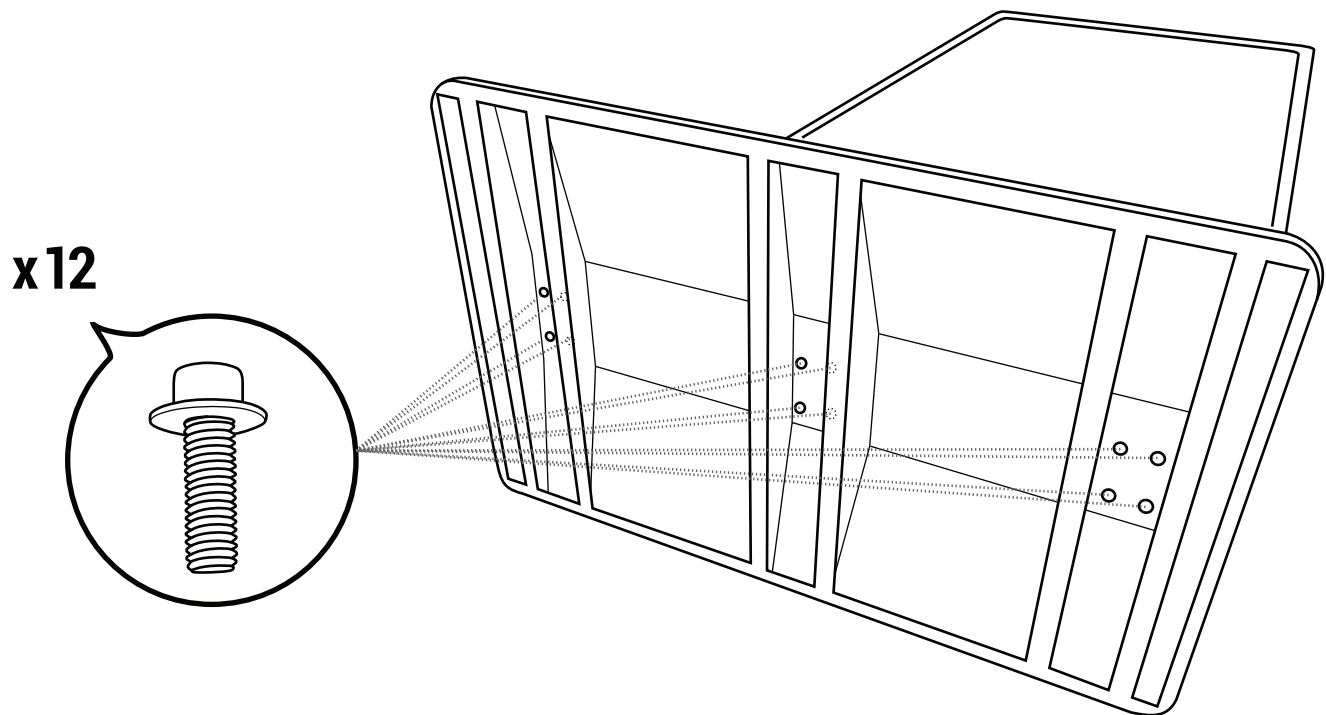


3. Open the large back panel of the Kiosk Display with the included Kiosk Key

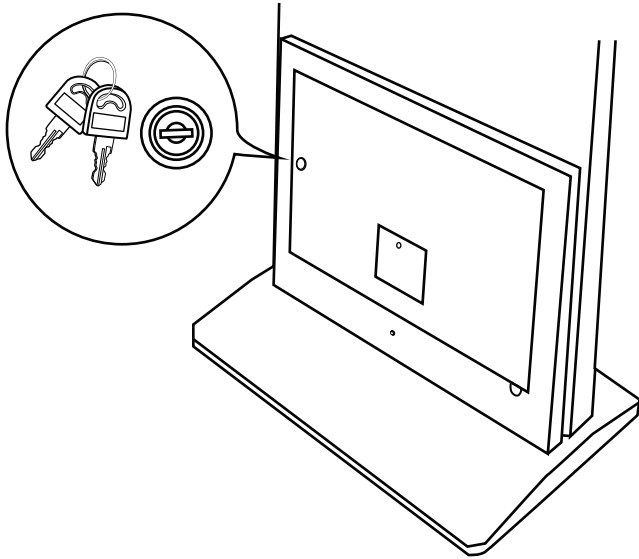

4. Plug in the AC Power Cord and run it through the bottom opening and the cable hole. Connect the other end of the AC Power Cord into a Power Outlet

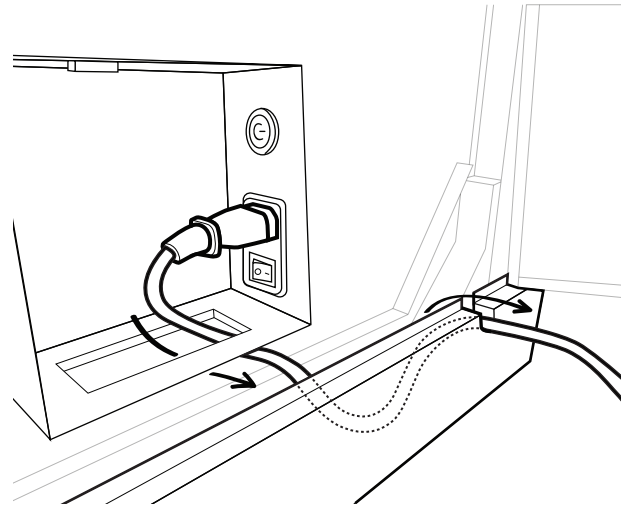



5. Connect a Network Cable to the Kiosk and run it through the bottom opening and cable hole. Connect the other end of the Network Cable into an Internet Source

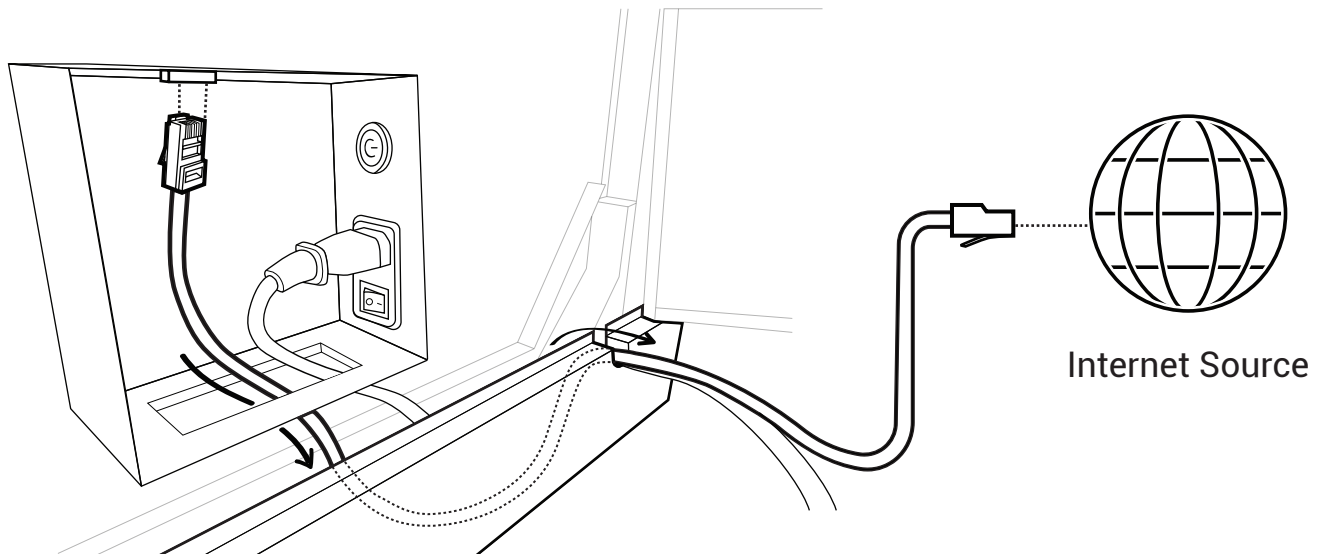

6. Close the large back panel of the Kiosk Display and lock it using the Kiosk Key

Power on the Kiosk

1. Open the small back panel of the Kiosk Display with the included Power Key

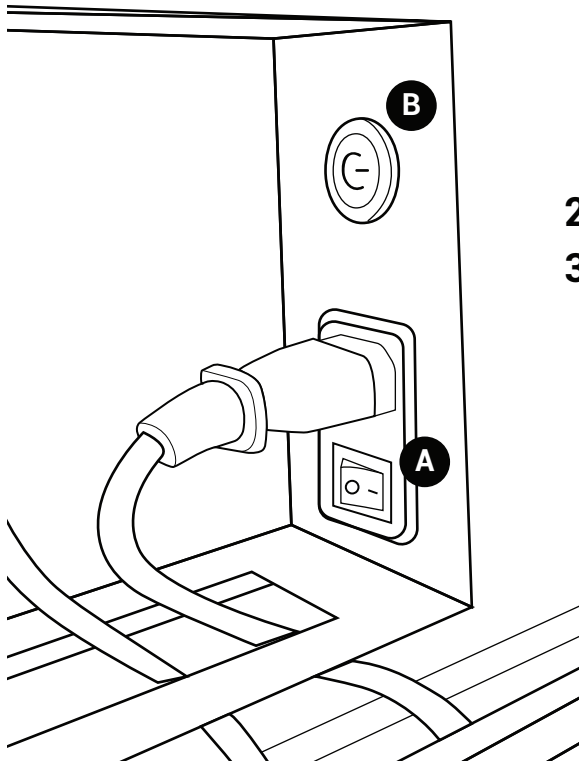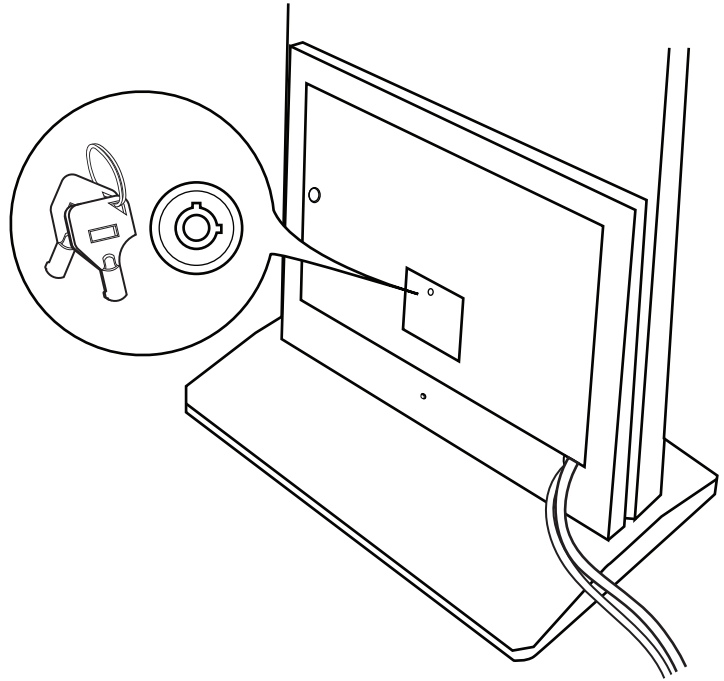

2. Flip the switch from "0" to "1" (A)
3. Press the Power Button (B)

4. Close the small back panel of the Kiosk Display and lock it using the Power Key