



KIOSK

 
INSTALLATION MANUAL

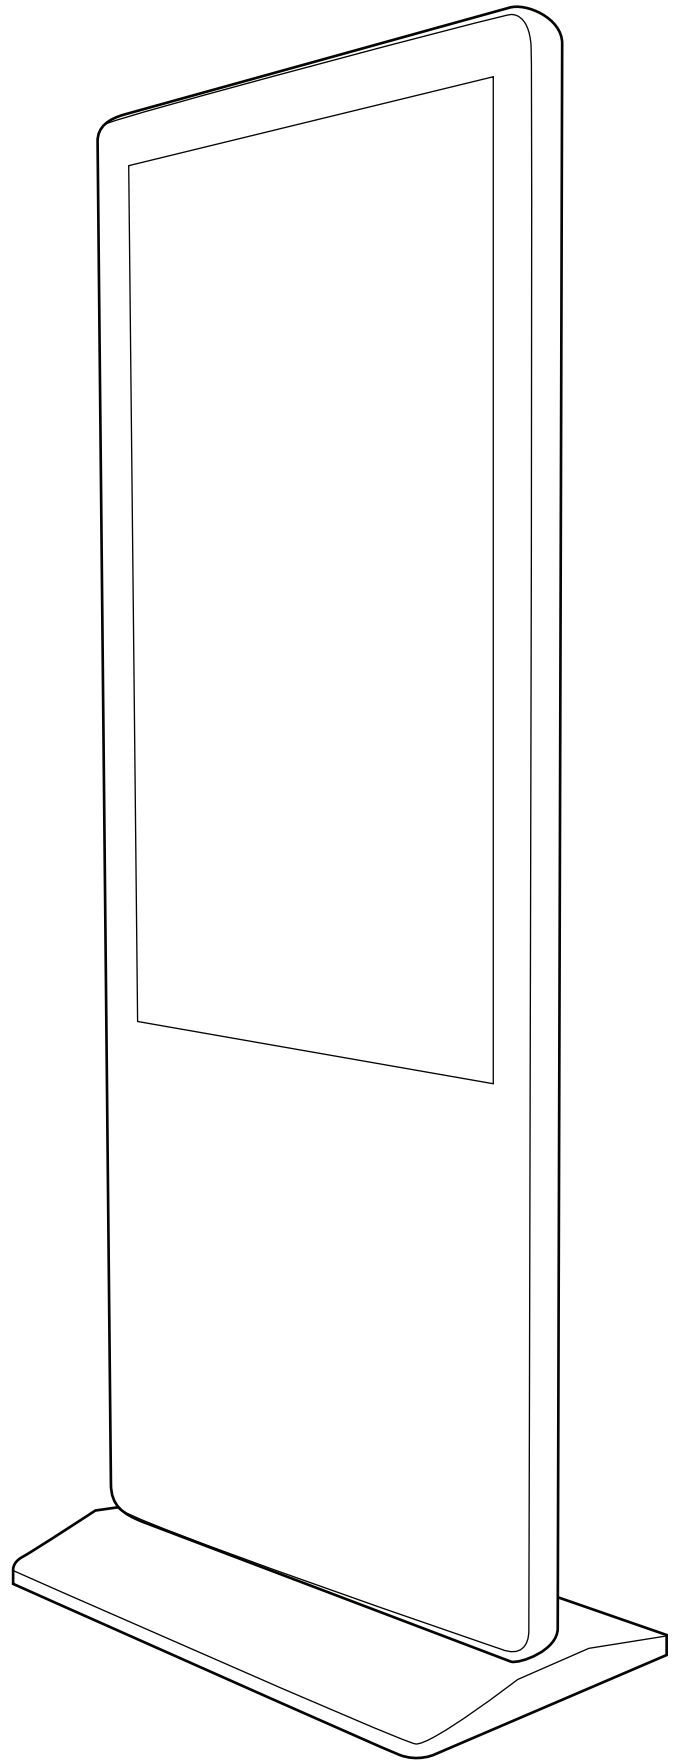


kuusoft

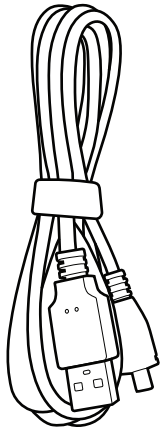


1x
Micro USB
Cable




1x
HDMI
Extender

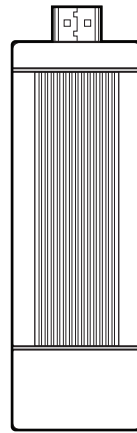


1x
Nano-PC3

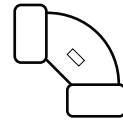


1x
Cornering
Anchor

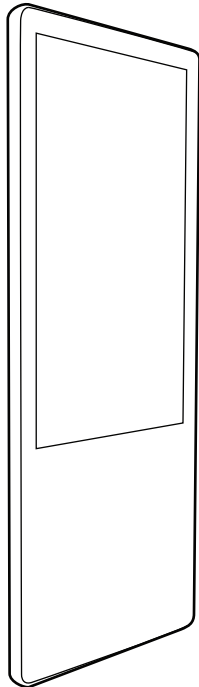


1x
Kiosk Display

 


2x
Kiosk Key

 


2x
Power Key

 

12x
Kiosk Stand
Screws

 


1x
Allen Key

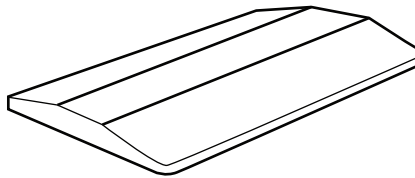

1x
Kiosk Stand


1x
Remote (not shown)

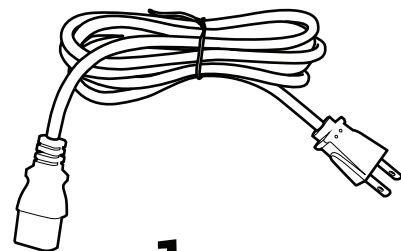

1x
AC Power Cord


Installing the Kiosk Stand

1. Unbox the Kiosk Display and place it on a flat surface, screen facing up with a minimum of 12" off the ground

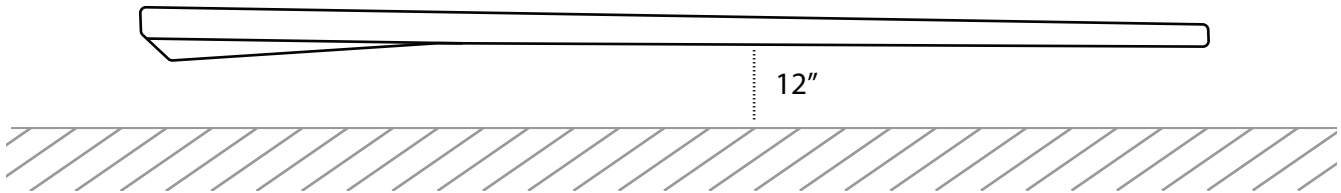


2. Remove the 12 Kiosk Stand Screws from the Bottom of the Kiosk Display

3. Attach the Kiosk Stand and tightly screw in the 12 Kiosk Stand Screws using the Allen Key


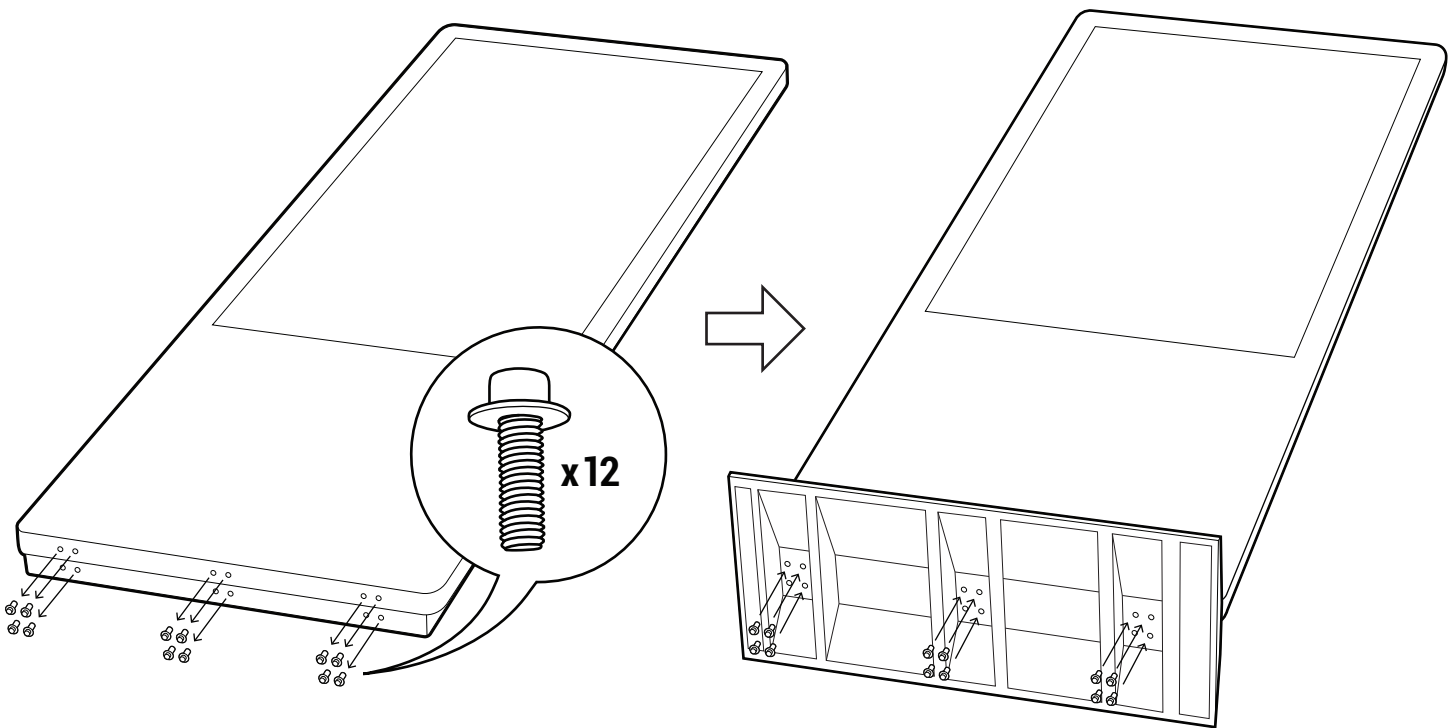


Installing the Nano-PC3 into the Kiosk

1. Attach the HDMI Extender to Nano-PC3

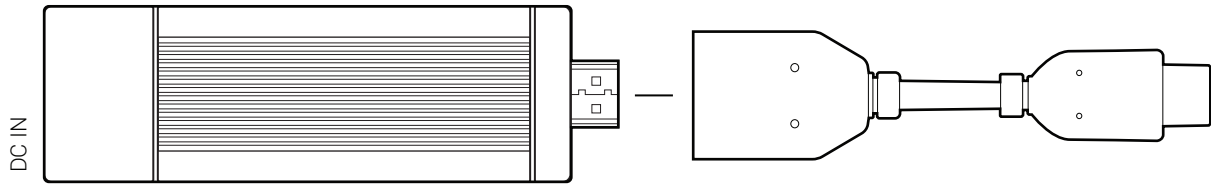


2. Open the large back panel of the Kiosk Display with the included Kiosk Key

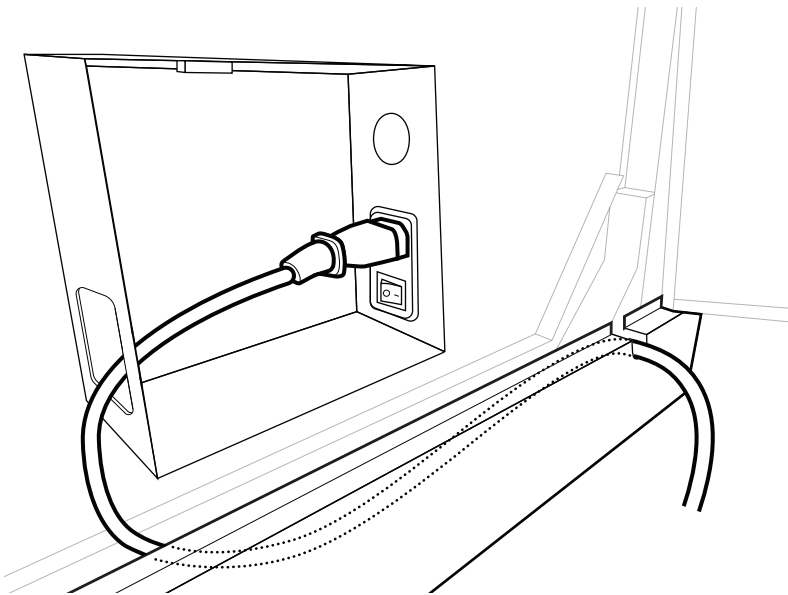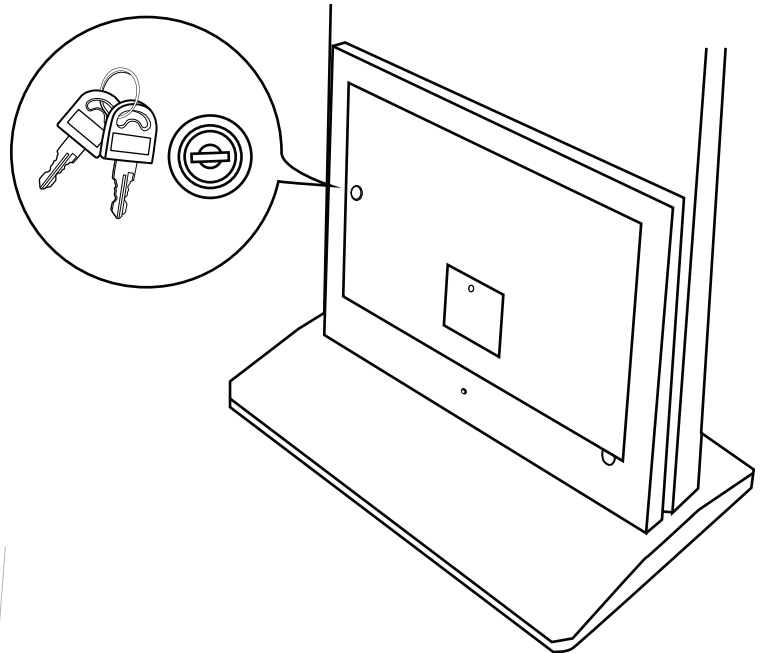


3. Plug in the AC Power Cord and run it through the left opening and the cable hole. Connect the other end of the AC Power Cord into a Power Outlet

4. Inside the Kiosk

- A** Plug the Micro USB Cable into the “DC IN” port on the Nano-PC3
- B** Plug the HDMI Extender into the HDMI port of the Kiosk
- C** Plug the other end of the Micro USB cable into the USB port of the Kiosk


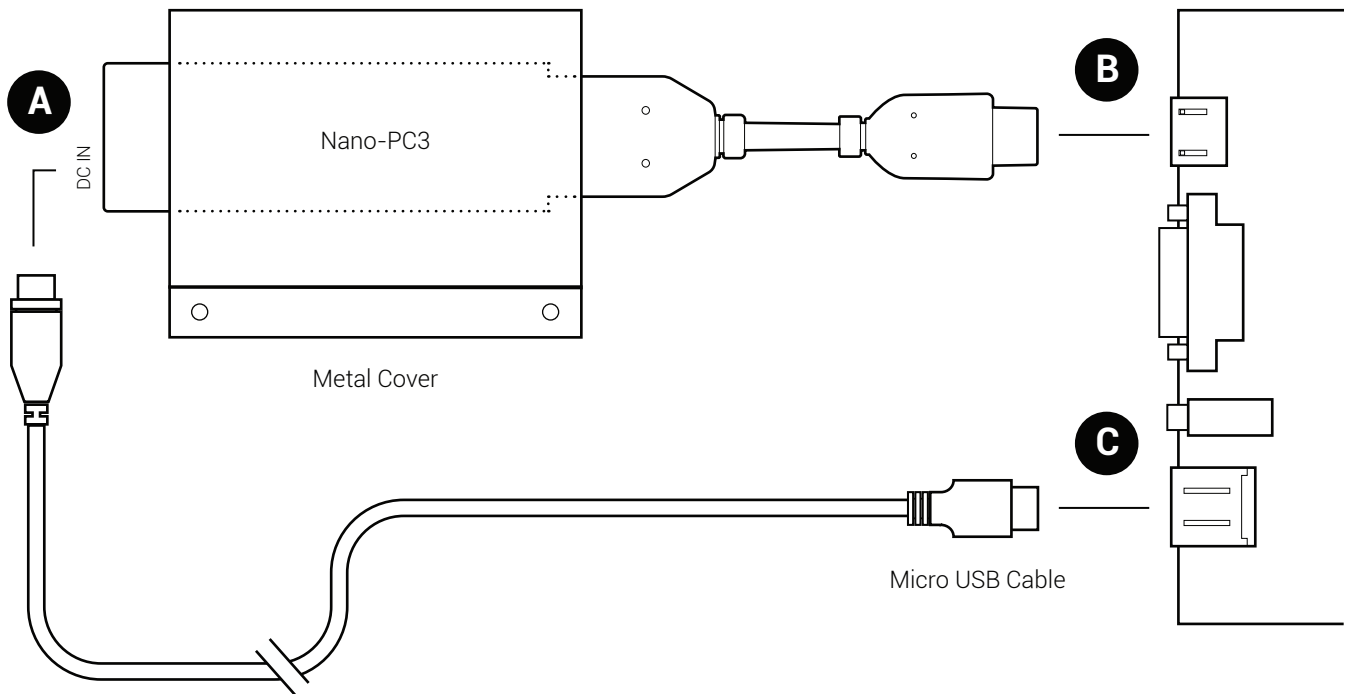


5. Close the back panel of the Kiosk Display with the included Kiosk Key

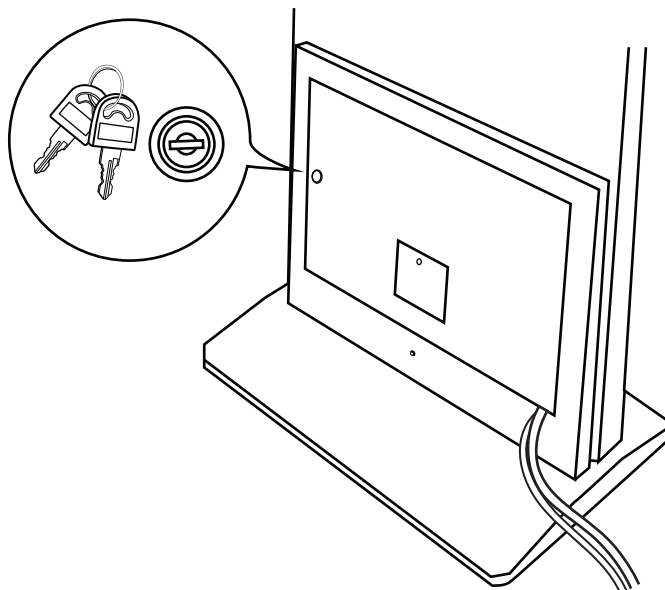

Power on the Kiosk

1. Open the small back panel of the Kiosk Display with the included Power Key

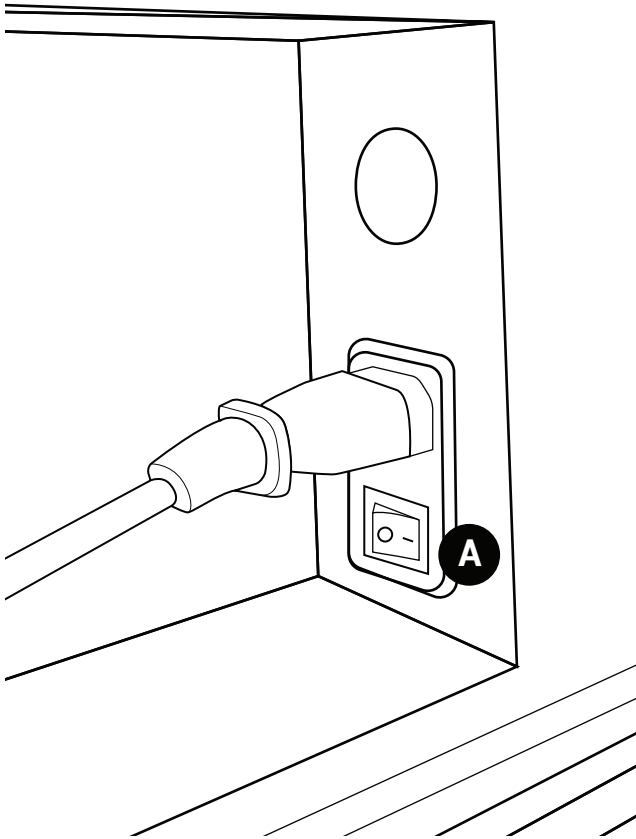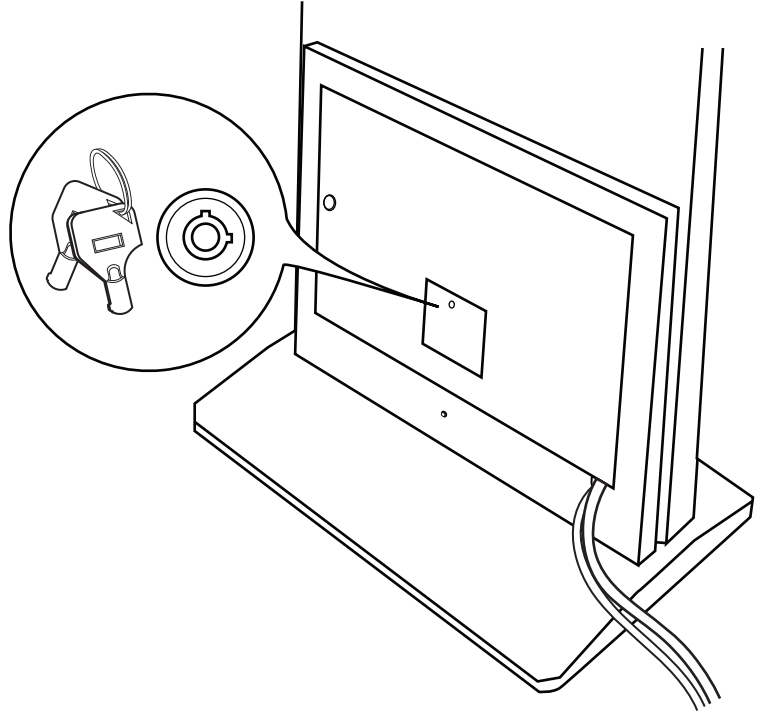

2. Flip the switch from "0" to "1" (A)

3. Close the small back panel of the Kiosk Display and lock it using the Power Key