




DIGITAL SANDWICH BOARD

INSTALLATION MANUAL

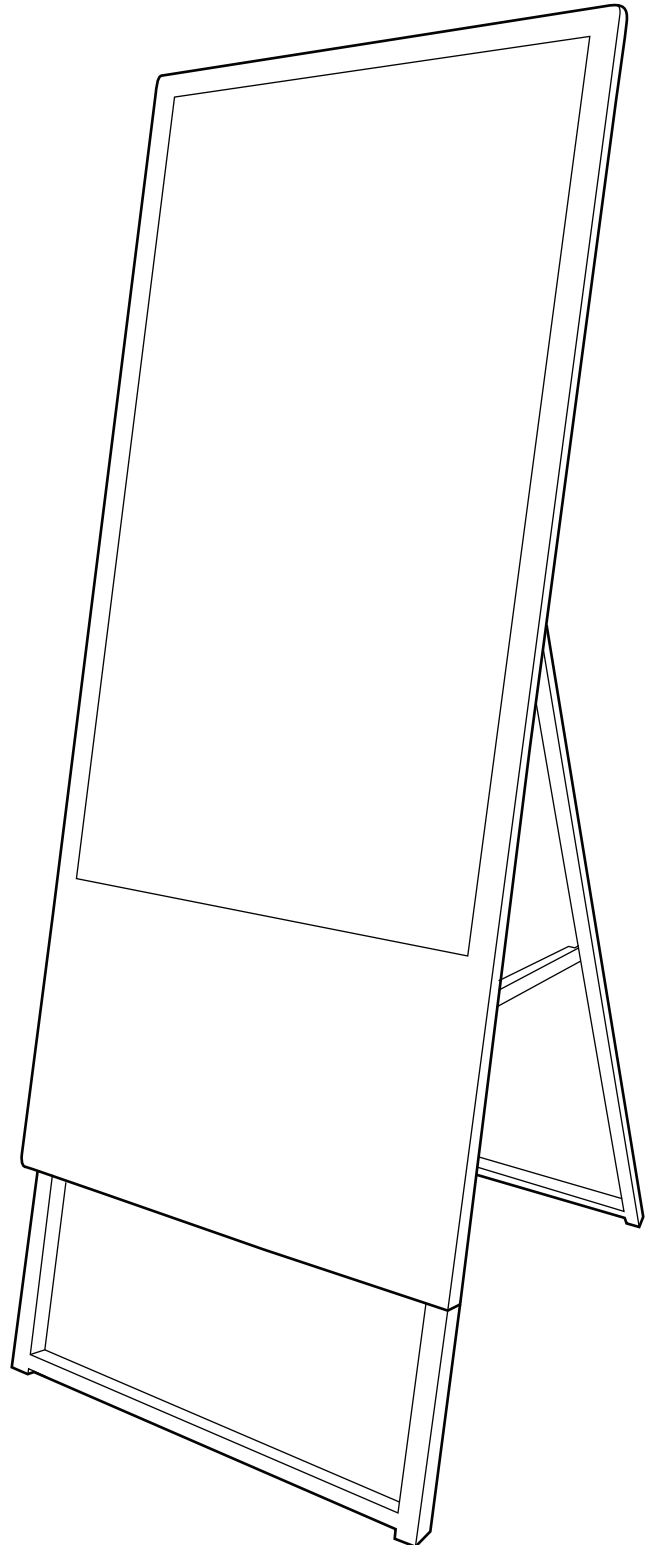


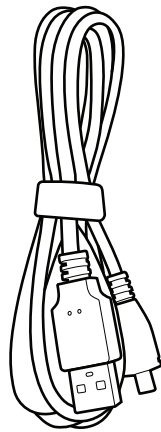

1x
Micro USB
Cable

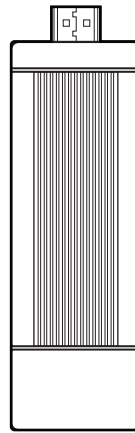


1x
Nano-PC3

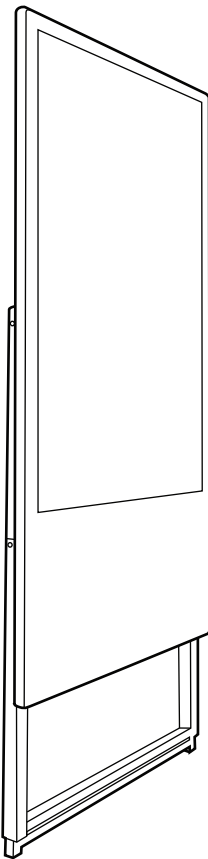


1x
Digital Sandwich Board



2x
Key

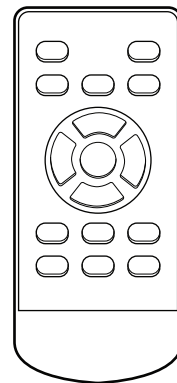


1x
Remote

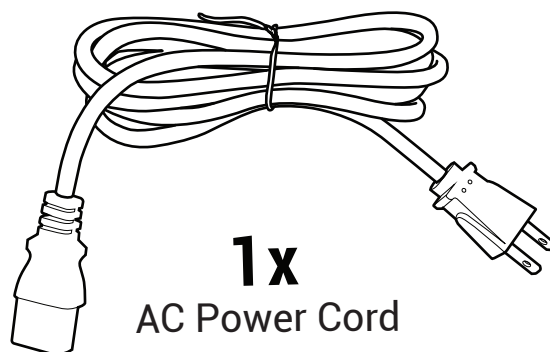

1x
AC Power Cord


Installing the Digital Sandwich Board

1. Unbox the Digital Sandwich Board, extend the A-Frame leg, and lock it into place

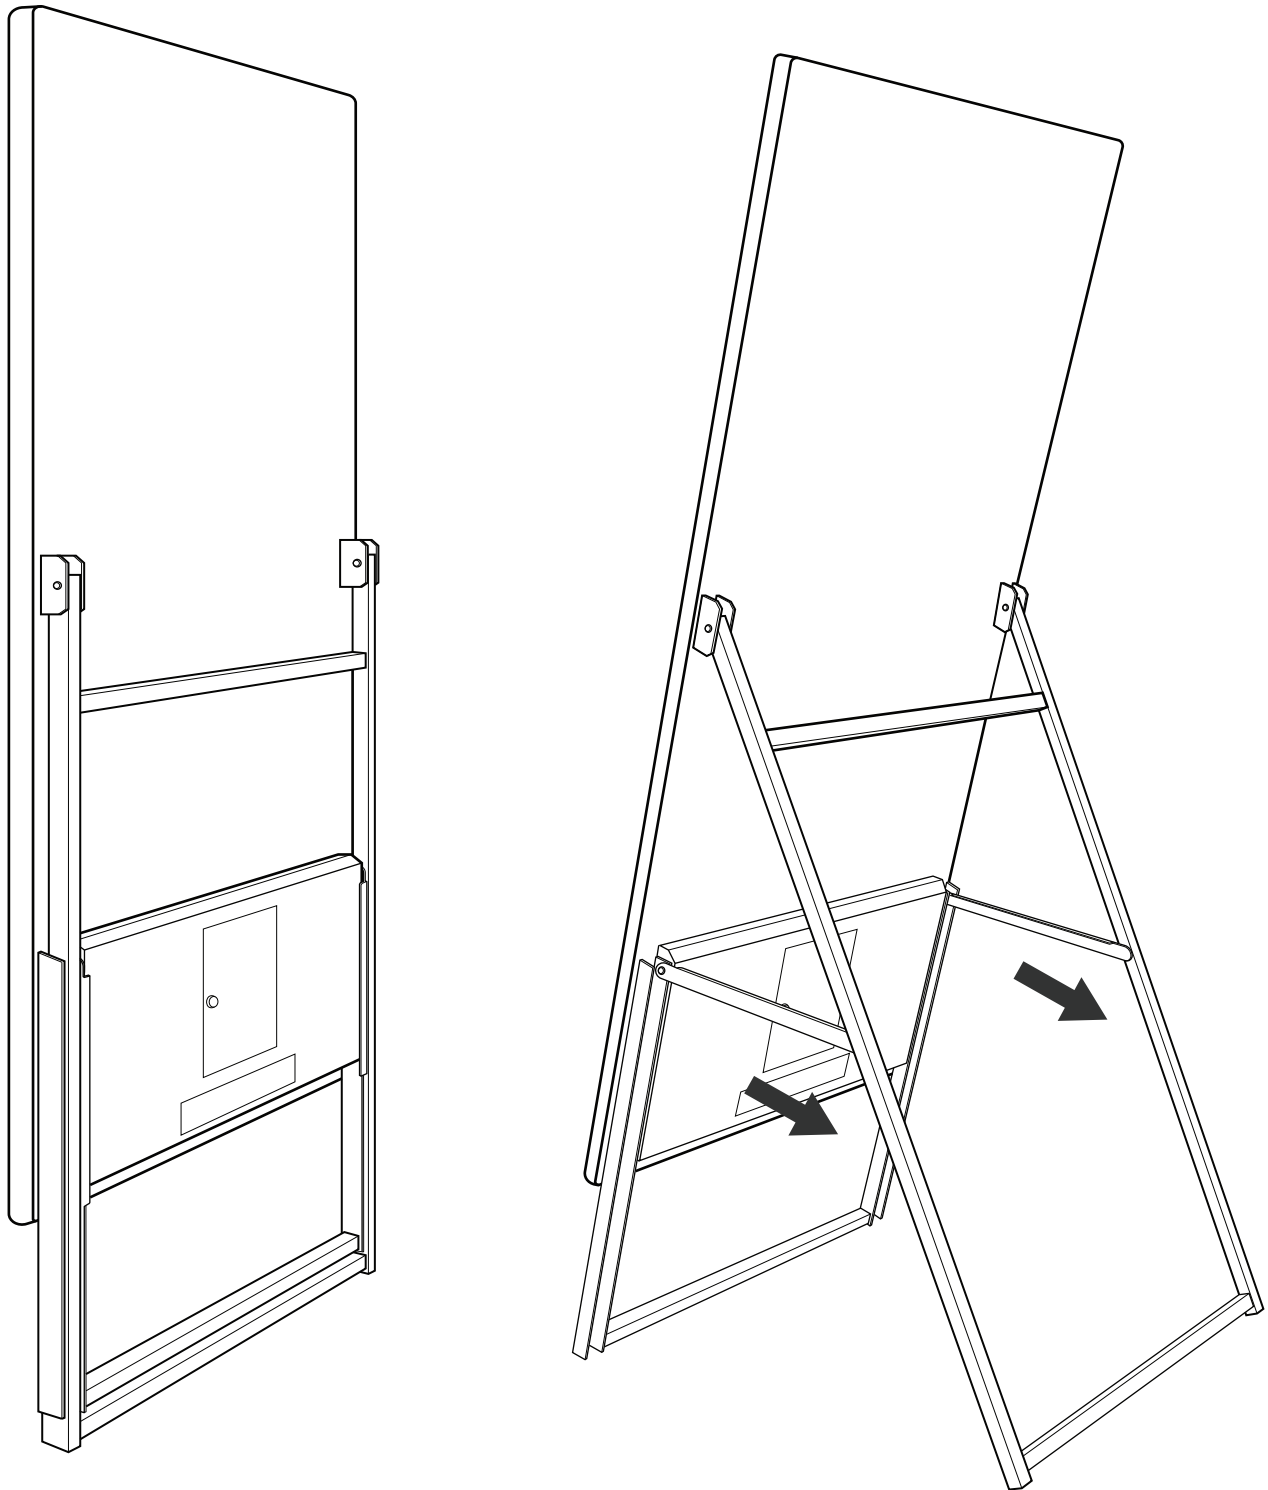


Installing the Nano-PC3 into the Digital Sandwich Board

1. Open the back panel of the Digital Sandwich Board with the included Key

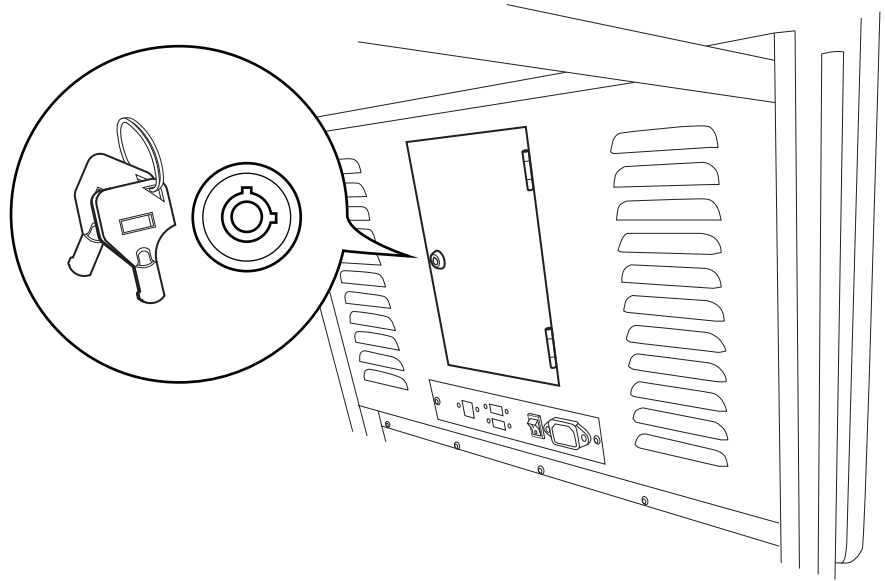


2. Plug the Micro USB Cable into the "DC IN" port on the Nano-PC3

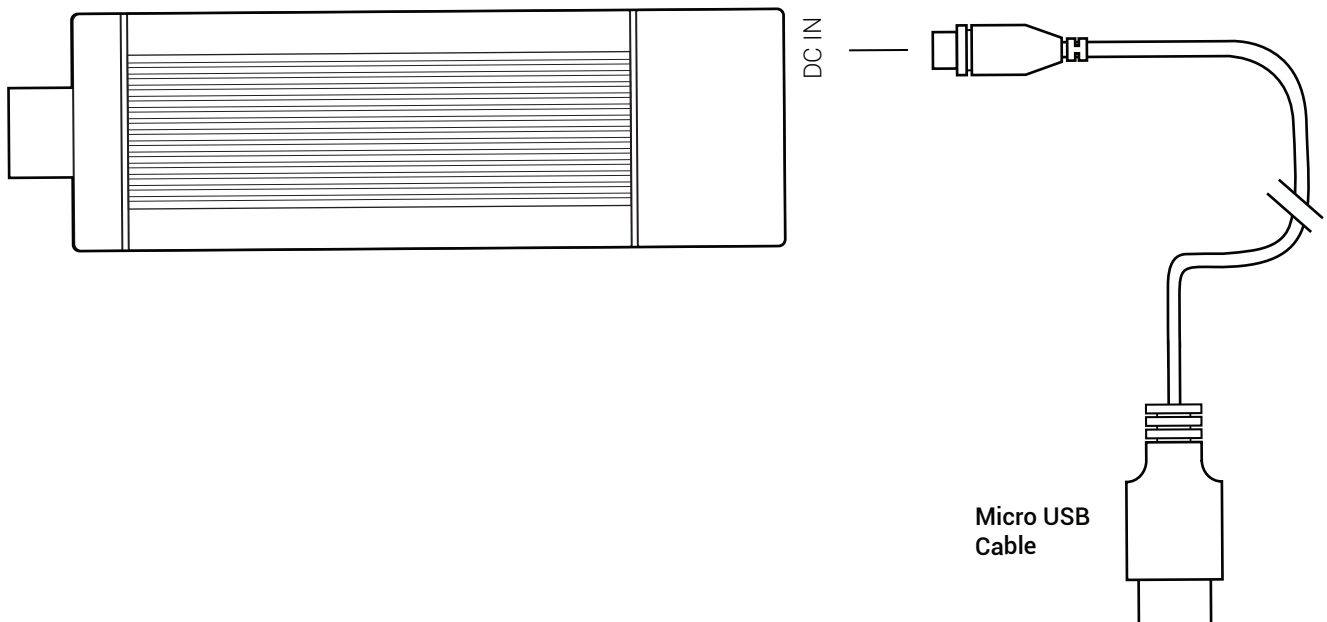


3. Inside the Digital Sandwich Board

- A** Plug the Nano-PC3 into the HDMI port of the Digital Sandwich Board
- B** Plug the other end of the Micro USB cable into the USB port of the Digital Sandwich Board
- C** Tuck in the Micro USB cable into the case

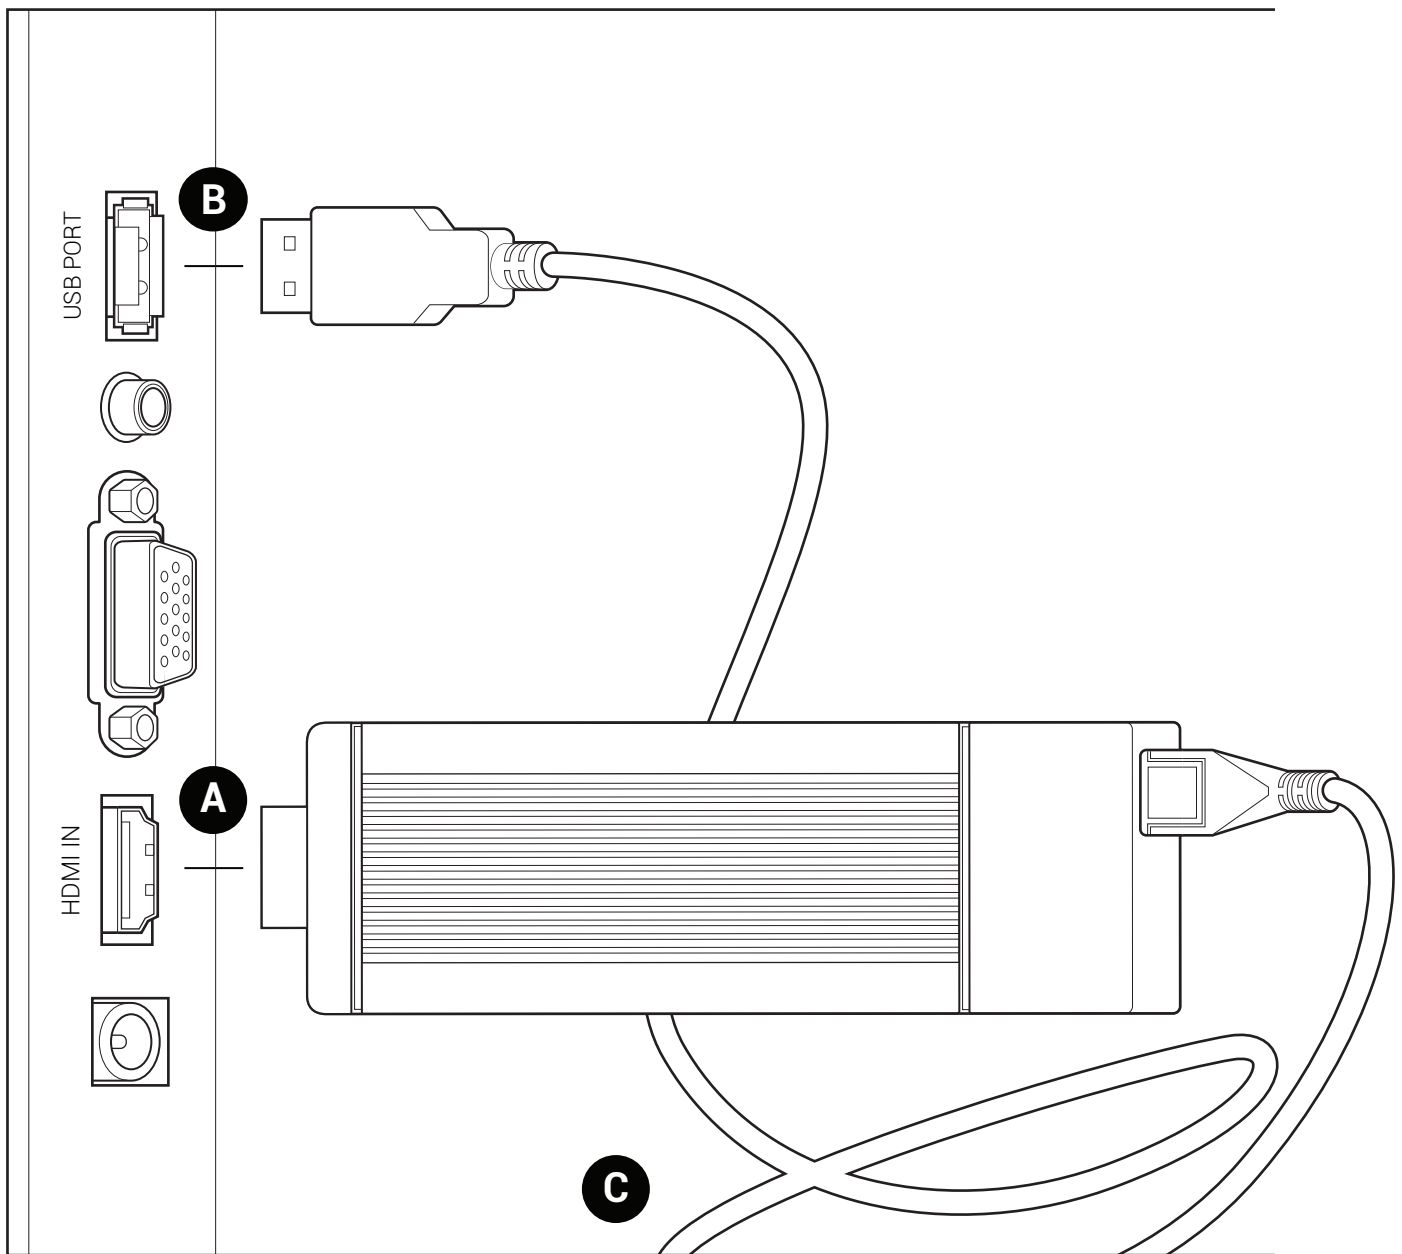

4. Close the back panel of the Digital Sandwich Board and lock it with the included Key

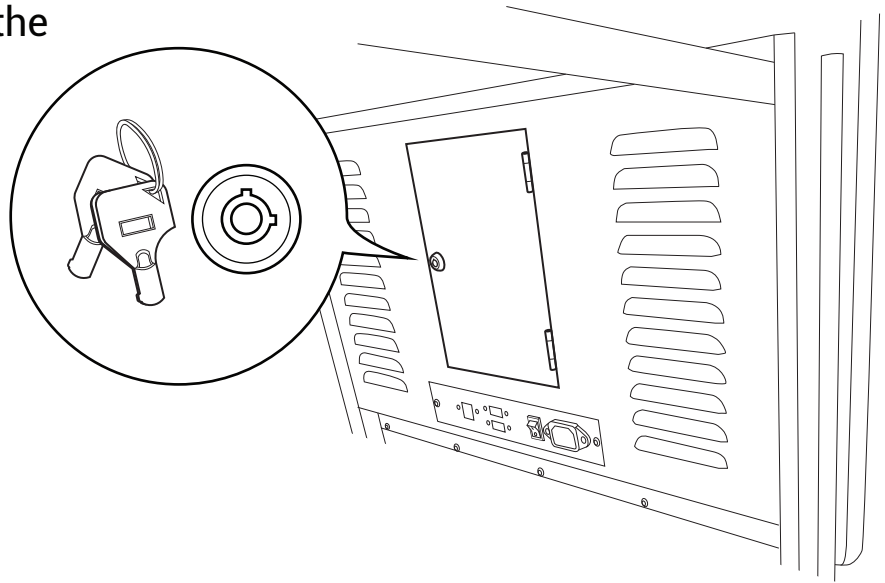

Power on the Digital Sandwich Board

1. Plug the AC Power Cord into the back of the Digital Sandwich Board and the other end into a Power Outlet
2. Flip the switch from "0" to "1"

